 


# Instruction for number combination lock

## Z RJ CODE SHOP

### CODING THE LOCK

During the default setting of the lock, no code is specified for the lock, **you create it.**

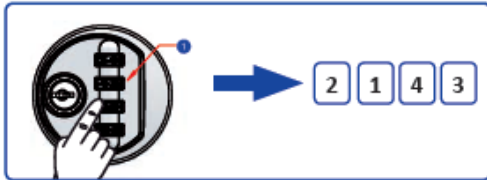 


1. During the default position of the number lock, the coded part is in a vertical position. If the shutter is not in this position, turn it to the right. If that fails, the compartment is already being used by someone else. In this case, select another compartment.

2. Set the code you want to use to open the compartment.

3. Rotate the closed body to the horizontal position to the left.

4. You have locked the locker, which only opens with the number you set.

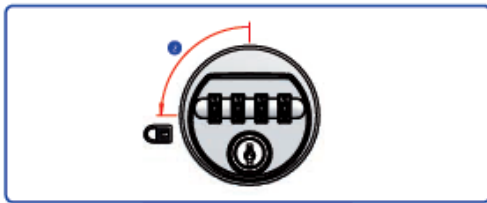 


### OPENING THE LOCK



1. On the number lock, set the code you entered earlier.

2. Rotate the closed lock to a vertical position.

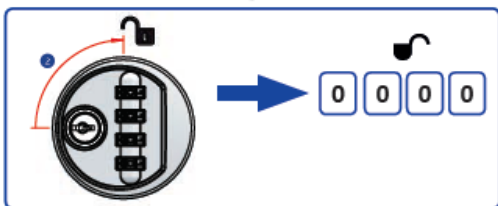

3. You have now opened the lock and can no longer lock it with the previously set code. **You will need to set the code again to close it.**